



# AdVue with 210/315W MasterColor Elite

## Electrical Installation Instructions

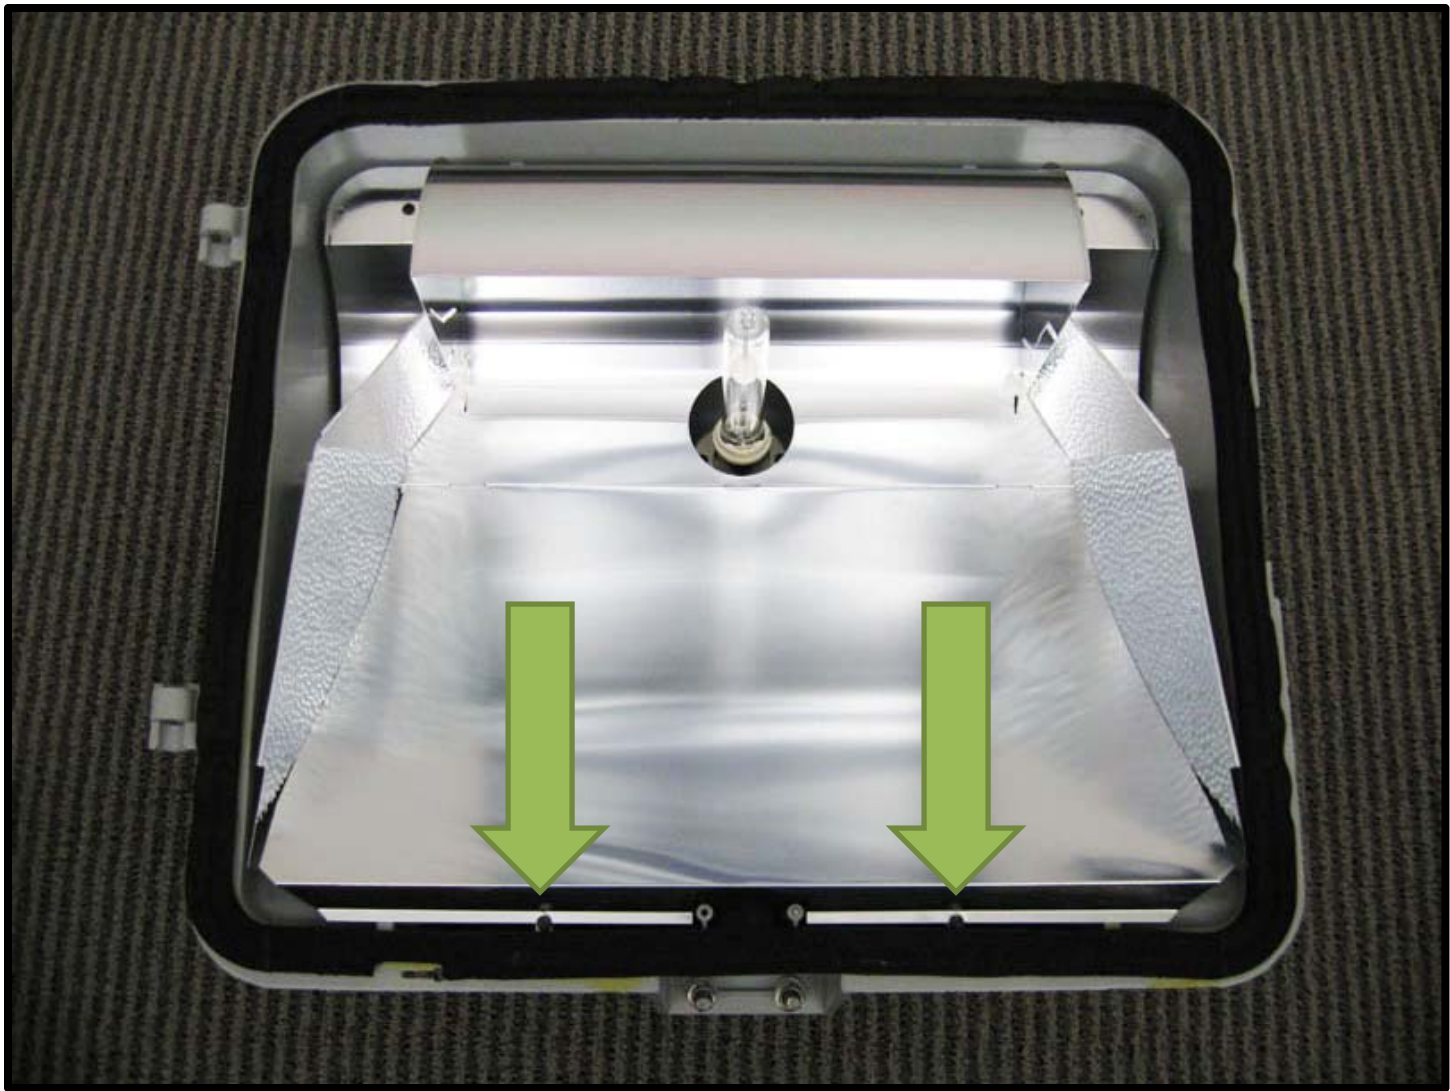

1. Disconnect electrical power before opening luminaire. Open Glass Door. Remove Reflector Screws and Main Reflector .

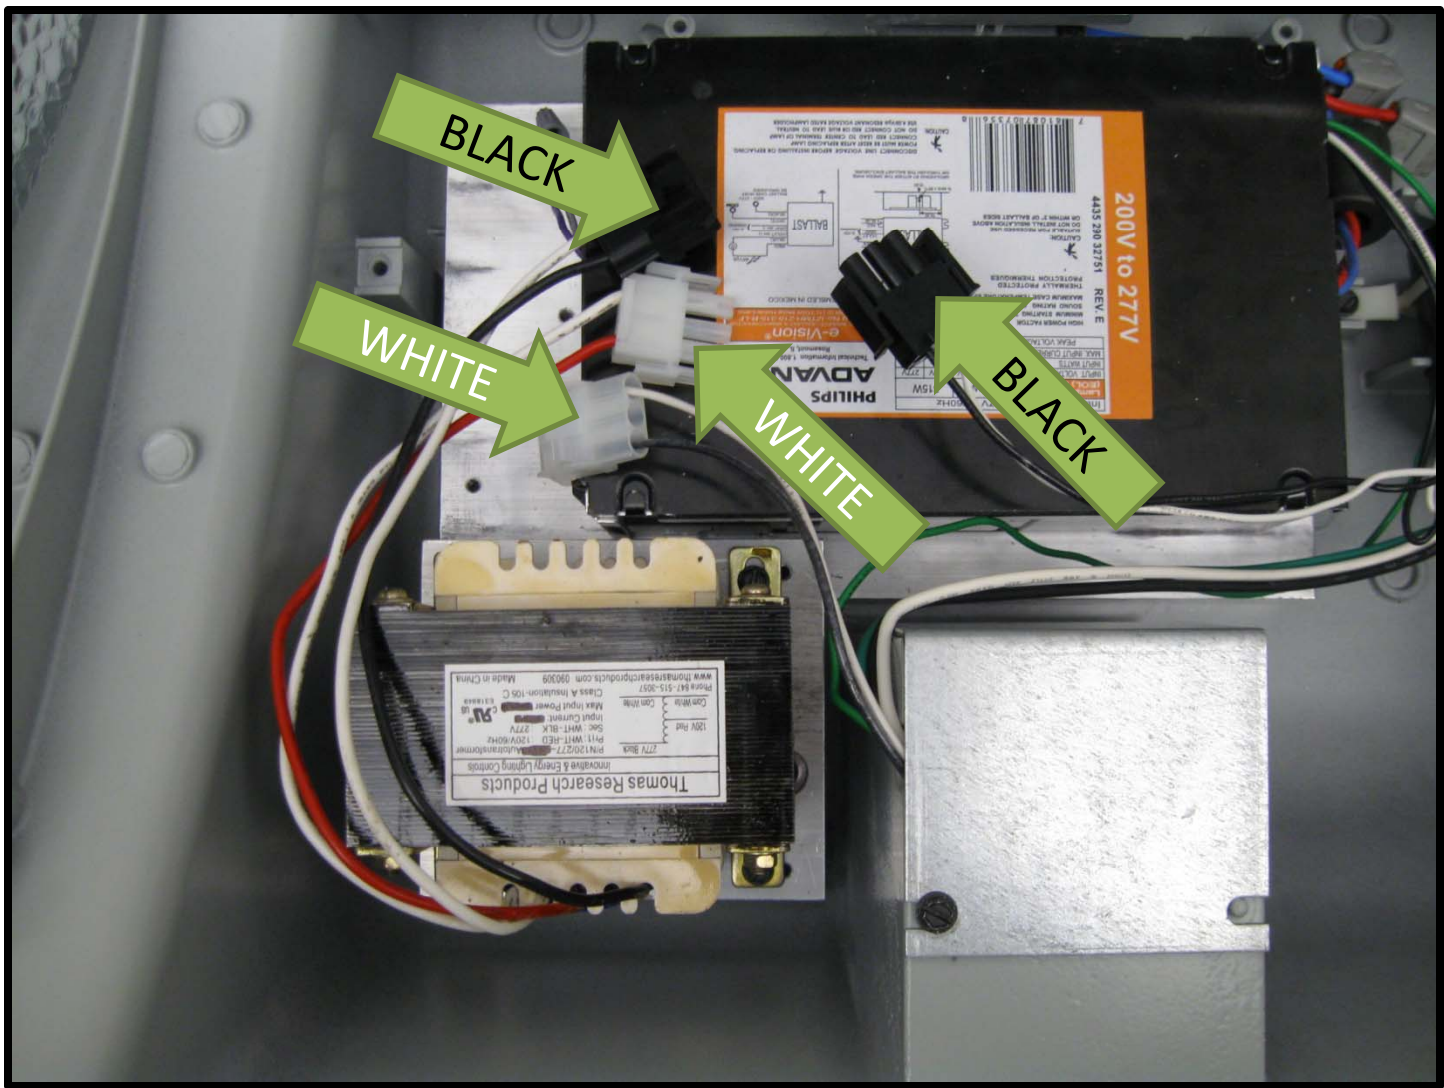


2. All 4 connectors come from the factory disconnected.




# AdVue with 210/315W MasterColor Elite

## Electrical Installation Instructions

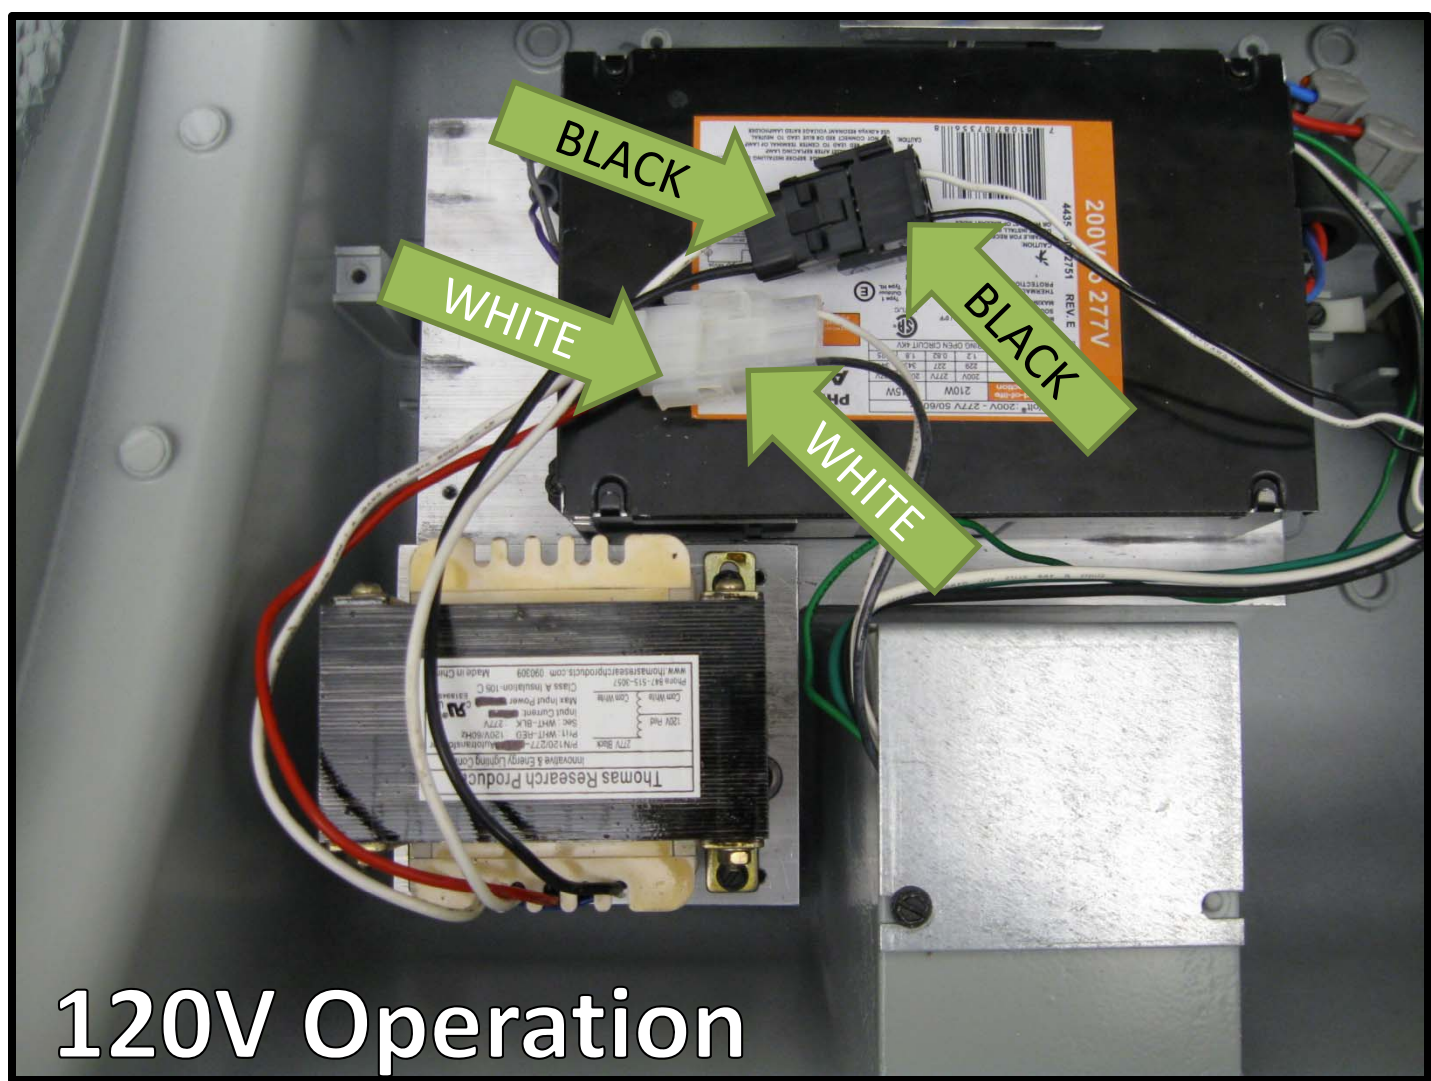

3. A) For 120V Operation: Connect White to White, Black to Black

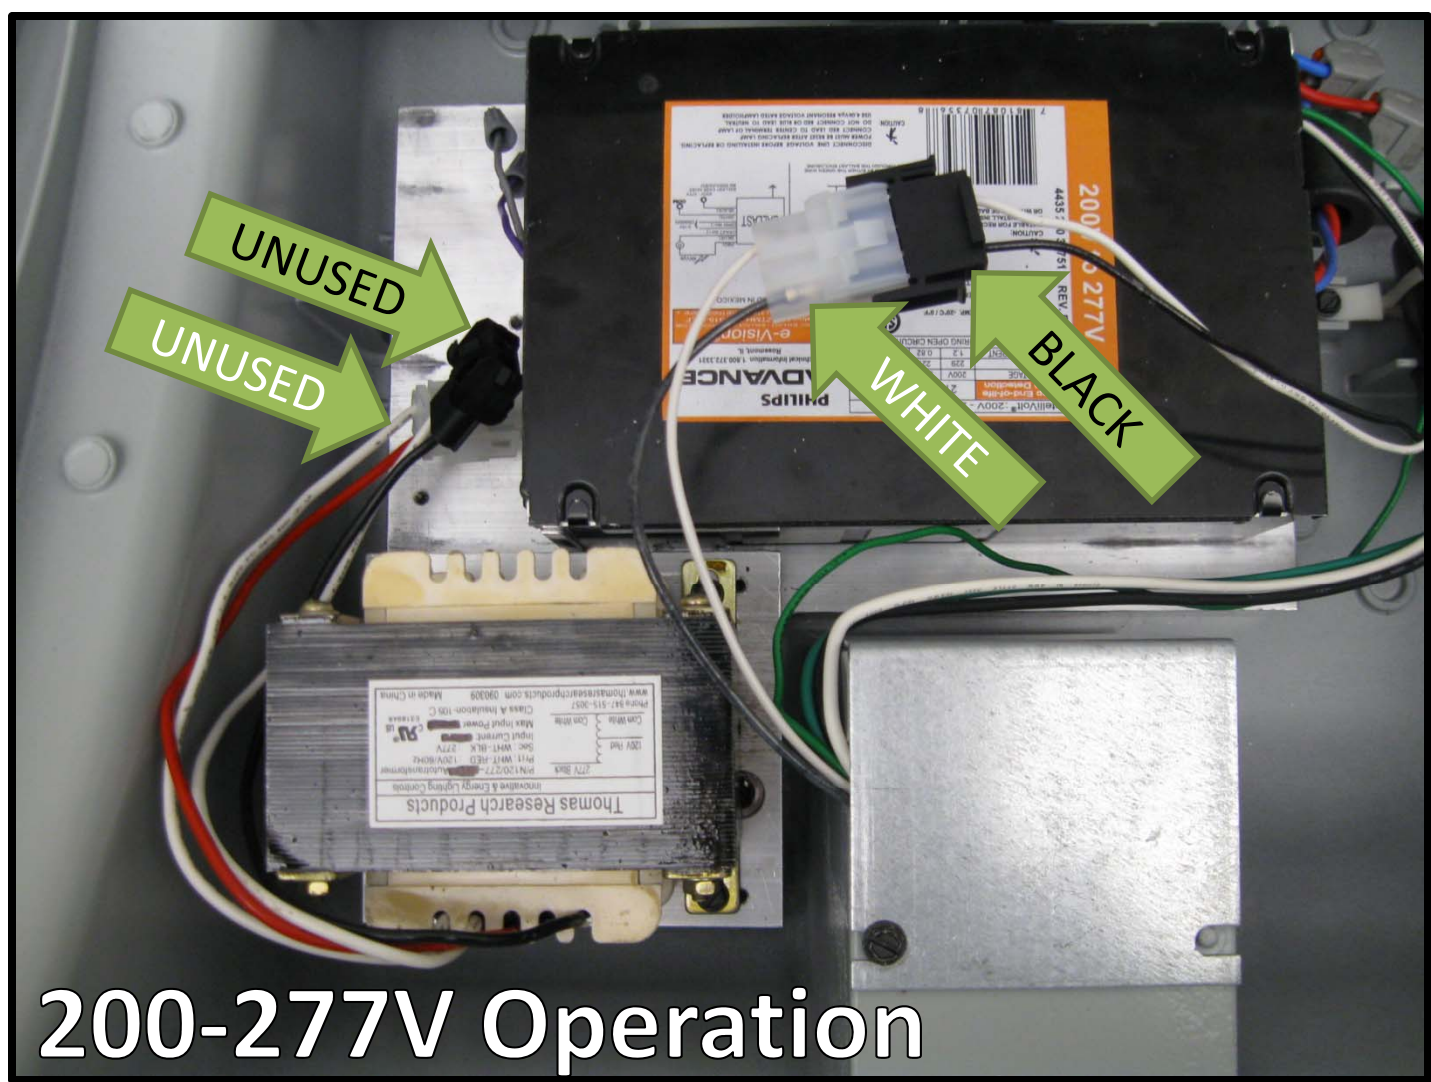


- B) For 200-277V Operation: Connect the White Wire Chamber Connector to the Black Ballast Connector. (You will leave the transformer connectors disconnected)



# AdVue with 210/315W MasterColor Elite

## Electrical Installation Instructions

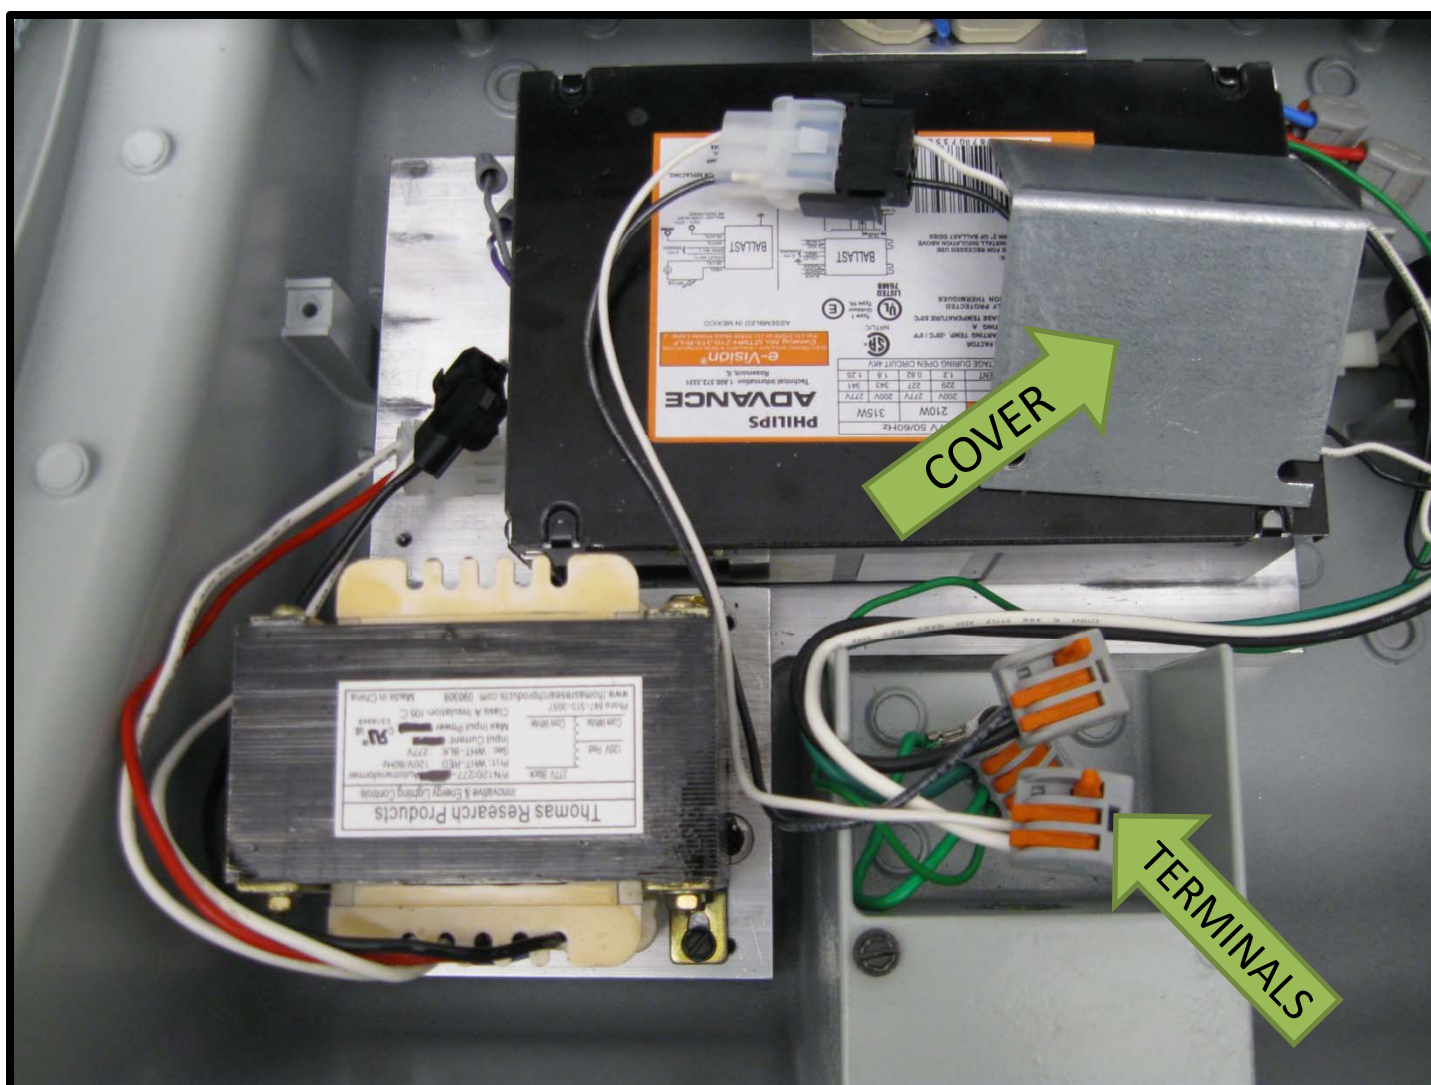

4. Remove Wire Chamber Cover and make supply conductor connections to the appropriate terminal blocks.
5. Reassemble wire chamber cover, main reflector and glass door. Electrical power may be resumed.